


DS-Aa MASONRY ANCHOR KIT INSTALLATION INSTRUCTIONS:

1. Make (4) marks 6-1/2" inch o/c corresponding with the four slots in the DS 360M over the suction outlet to be protected.
2. Drill (4) 1/4" x 1 3/4" - 2" deep holes. (no deeper than 2")
3. Install the DS-Aa nose first into clean hole. Be sure to set DS-Aa anchor to bottom of hole prior to installing screw. DS-Aa anchor will expand 2x its original length, sealing the hole and providing the highest holding power.

*If using screw gun to install supplied screws; Set on least amount of torque to insure no damage to DS-360M suction outlet cover.

** To set screws into DS-Aa anchor, a power tool is suggested for proper installation.

*** Do not over tighten screws as damage to DS-360M may result.

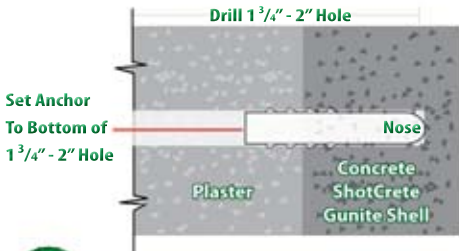

DRAINSAFE®

**FOLLOW ALL DRAINSAFE®
INSTALLATION INSTRUCTIONS**